



## Balancers Installation Instructions Front




Remove the wheel



Place the balancer inside the rim, and make sure that it doesn't touch the valve stem and lays flush in the wheel.



Install the balancer making sure the balancer fits flush over the drum, aligning studs in proper hole.

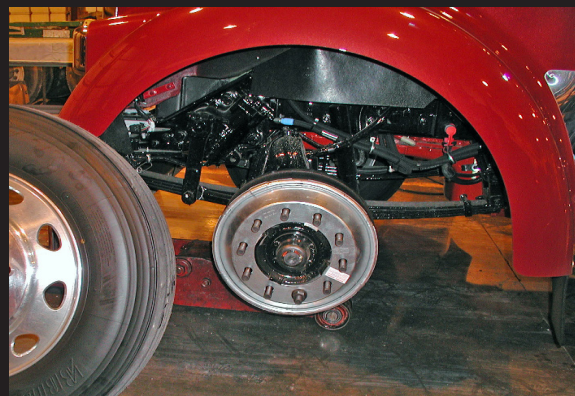

Balancer during installation



Balancer during installation



Balancer After installation



## Installation Instructions Rear



Remove the outside wheel and place the balancer between the rear wheels. Align the balancer valve stem access hole with the inside tire valve stem.



Balancer after installation